

Stack Your Closets - Plan Now

By planning now for a future home elevator, designers, architects, contractors, developers, and home owners can add value for pennies now and future-proof home for accessibility.

Before




Now

- Allow 8" for recessed elevator pit in slab
- Allow for proper overhead clearance (96" minimum)
- Size closets to match standard elevator shaft requirements
- Install 2" x 12" blocking requirements in wall
- Offset doors
- Install temporary flooring at each level and in pit
- Run electrical lines to designated area for equipment
- (1) 240 VAC
- (1) 120 VAC
- (1) Phone Line

Later

- Remove temporary floors
- Install Elevator !

After

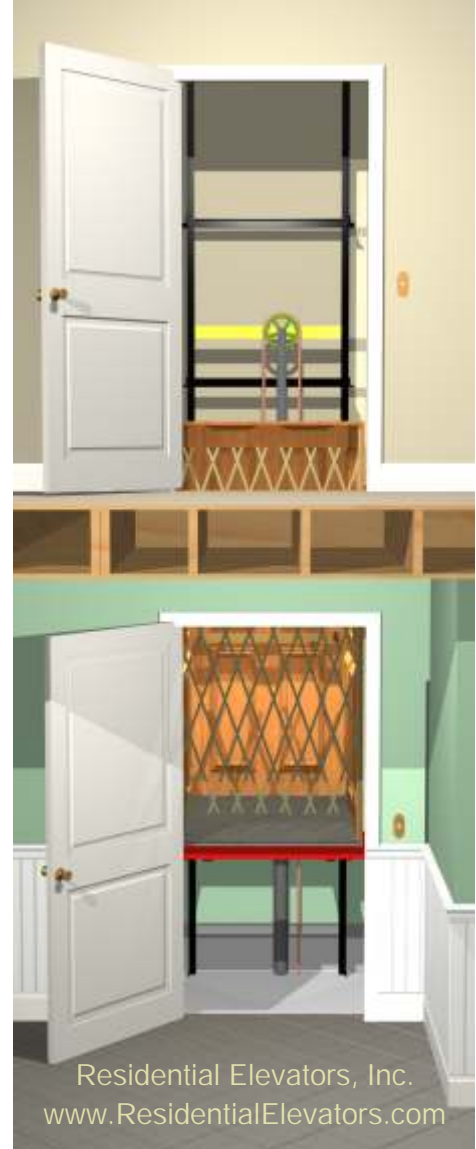

THE INFORMATION CONTAINED HEREIN IS SOLELY OWNED BY RESIDENTIAL ELEVATORS, INC. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT WRITTEN PERMISSION FROM RESIDENTIAL ELEVATORS, INC. IS STRICTLY PROHIBITED.

November 2011



Residential Elevators, Inc.
20 Residential Drive, Crawfordville, FL 32327

Toll Free 1-800-832-2004
contact: sales@ResidentialElevators.com
ResidentialElevators.com