


Residential Elevators - Standard REI Interlock

Standard REI interlock is integrated into door panel complying with 3/4" x 4" door rules. Consult with your local REI representative for guidance.

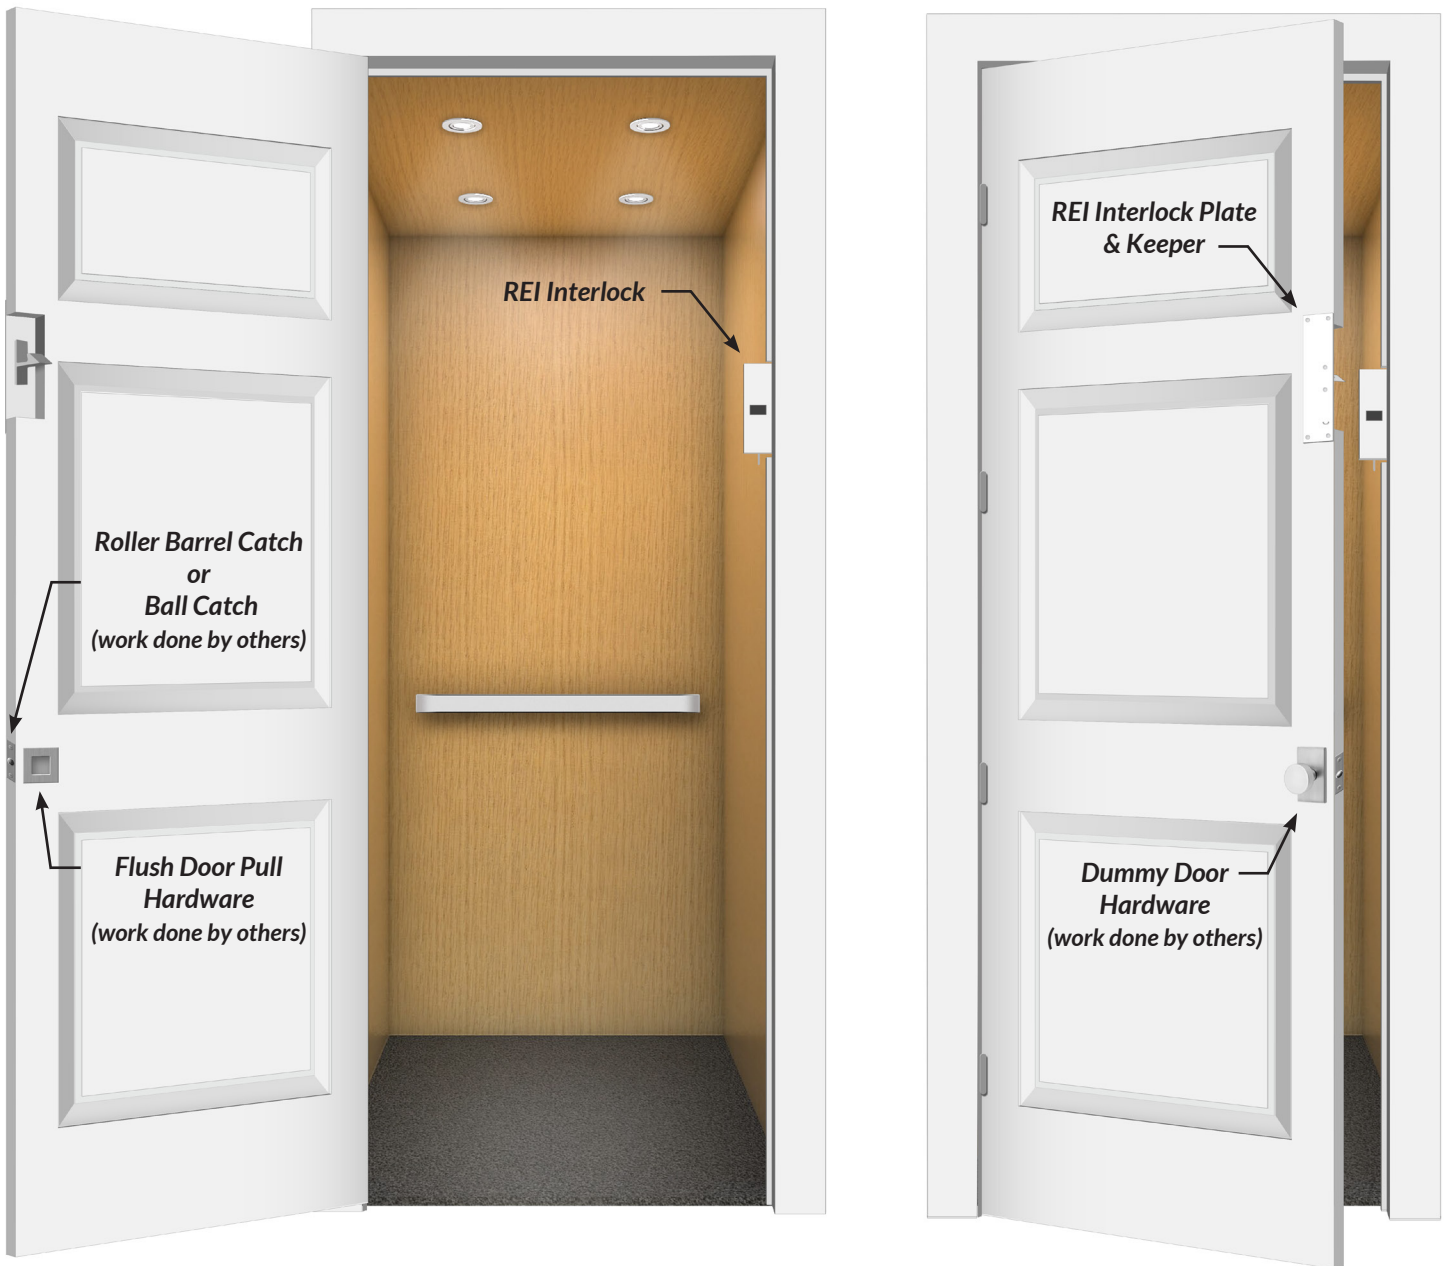

Residential Elevators - Standard REI Interlock

— Door Jamb & Panel Preparation —

- ❑ Cut and remove section of door panel at interlock location.
- ❑ Cut and remove section of door stop at interlock location.
- ❑ Bore elevator side of door panel to accommodate flush door pull hardware.
- ❑ Install a door catch device (20-25lb Magnetic Door Catch, Roller Catch or Ball Catch)
- ❑ Its recommended to install preloaded hinges in an effort to keep door panel seated against the doorstop at all times. It is imperative that the door closes flush against doorstop, without rejection.

